 
 
 
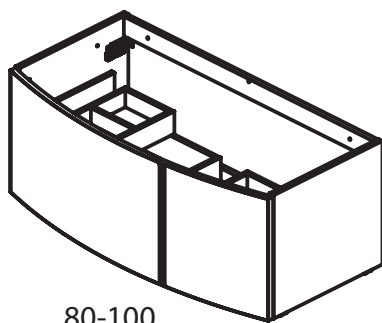 
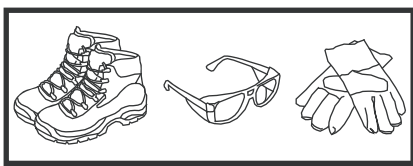 
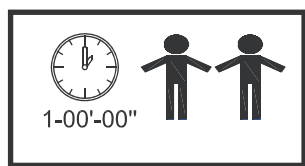 
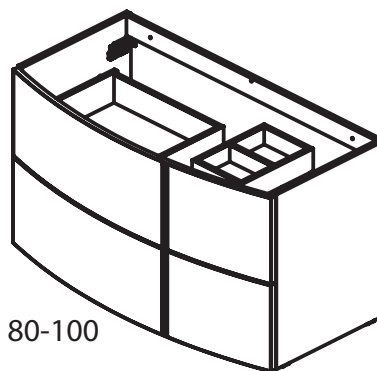 
 
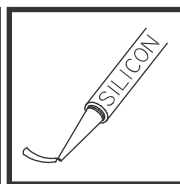 
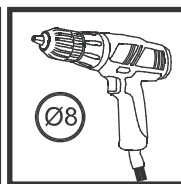 
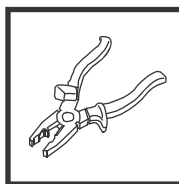 
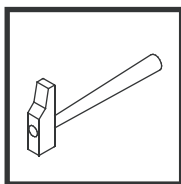 


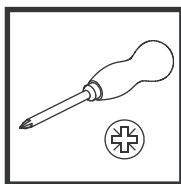

80-100

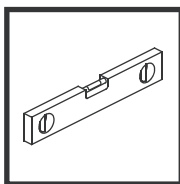

 
80-100

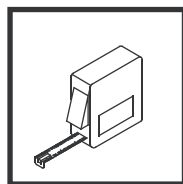

x2




x4



x4


BO-719

 01.

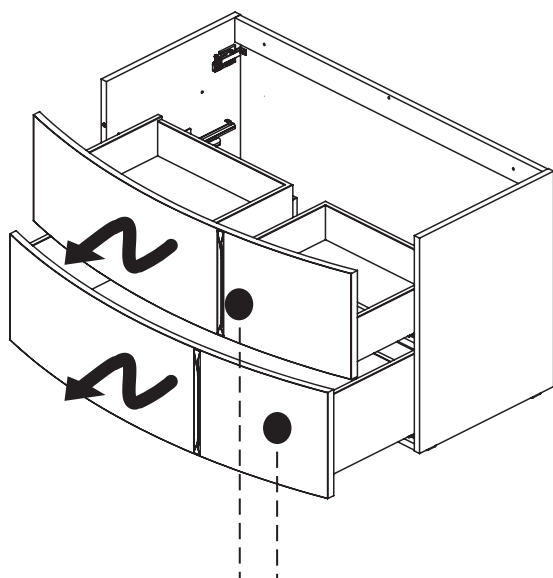


Tirar del cajón hacia el frente y ligeramente hacia arriba para extraerlo
 In order to extract the drawer, pull it forward and softly upwards.
 Sortir le tiroir en le soulevant légèrement vers le haut pour l'extraire du meuble.
 Die Schublade nach vorne und leicht nach oben ziehen, um Sie zu entfernen.
 Per tirare fuori il cassetto alzi il fronte e leggermente verso di su.


 
02.

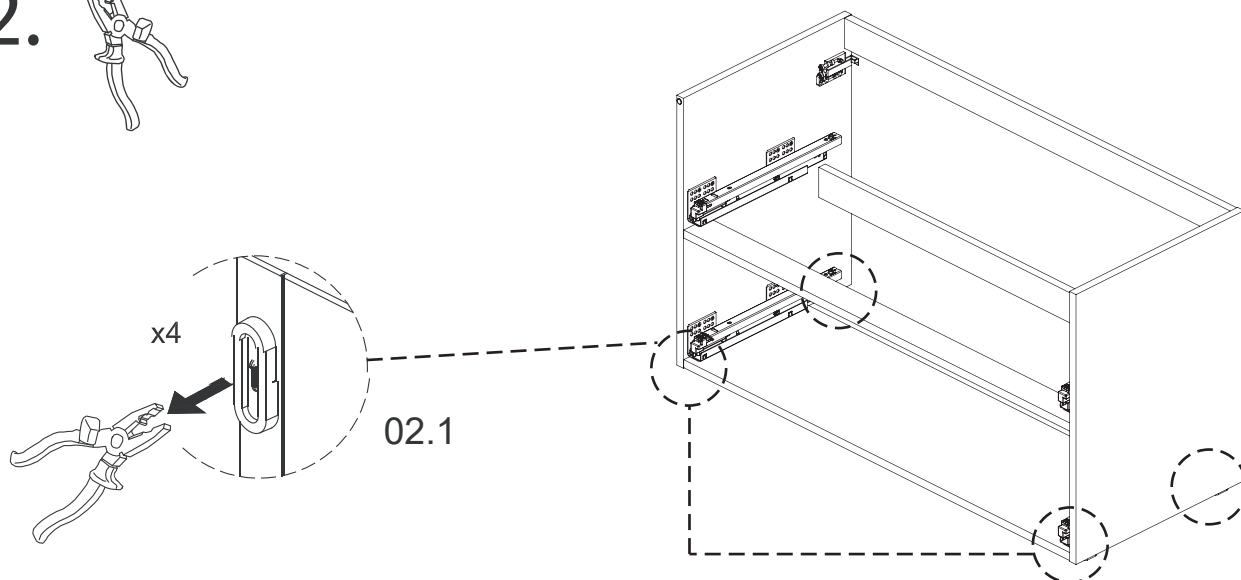


 
03.

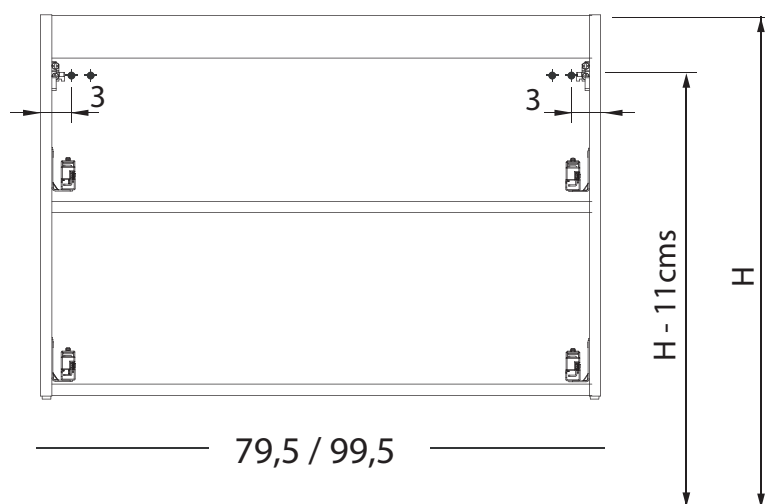

  
04.

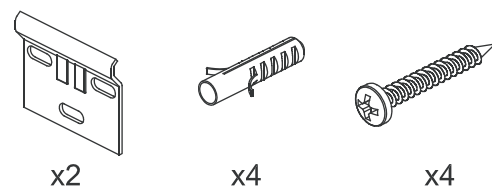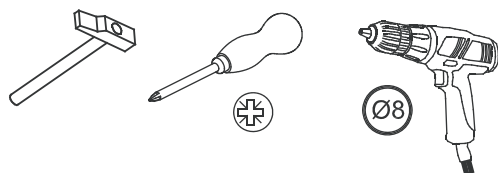


BO-719

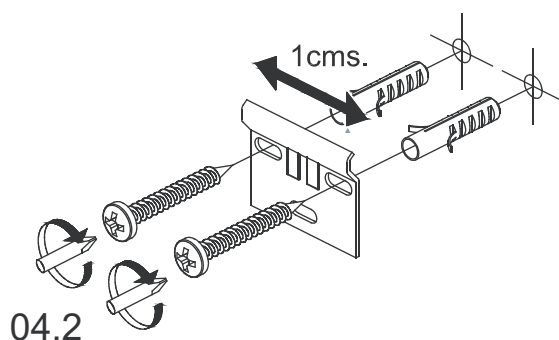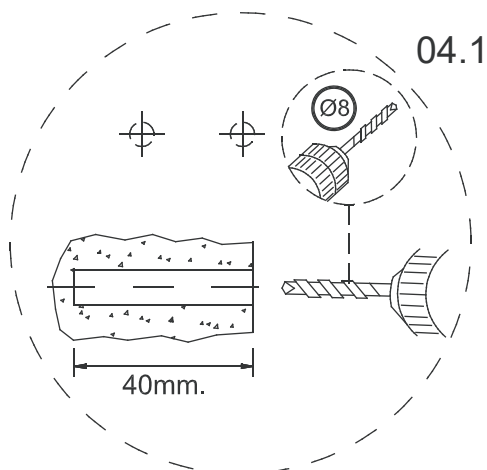  

 
05.

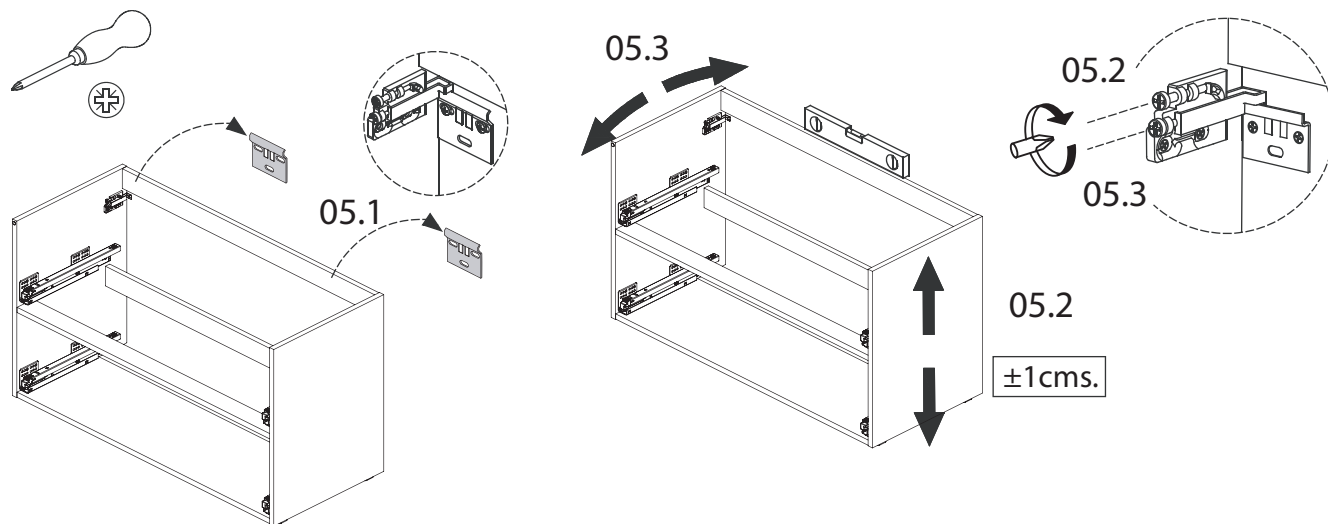


 
06.

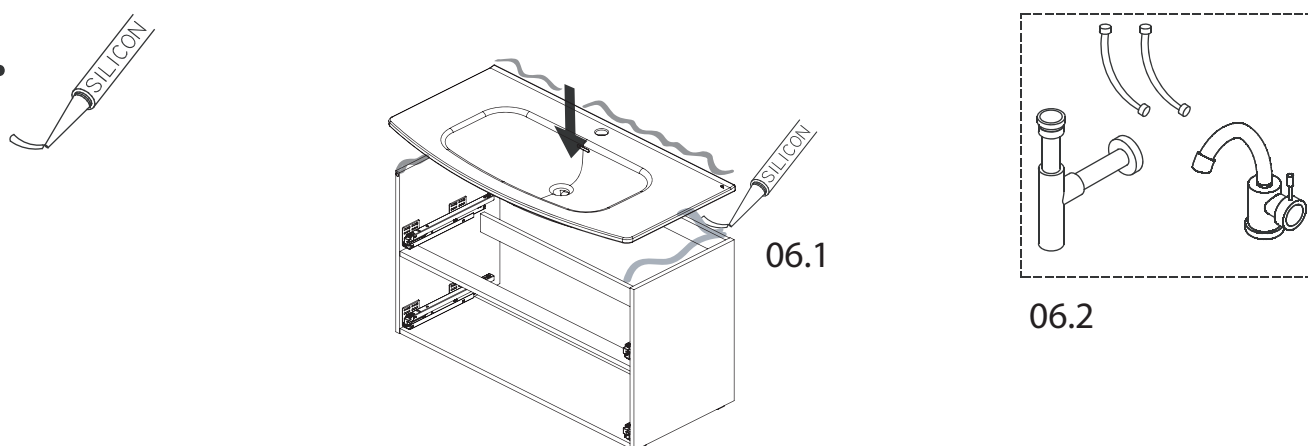



 
07.






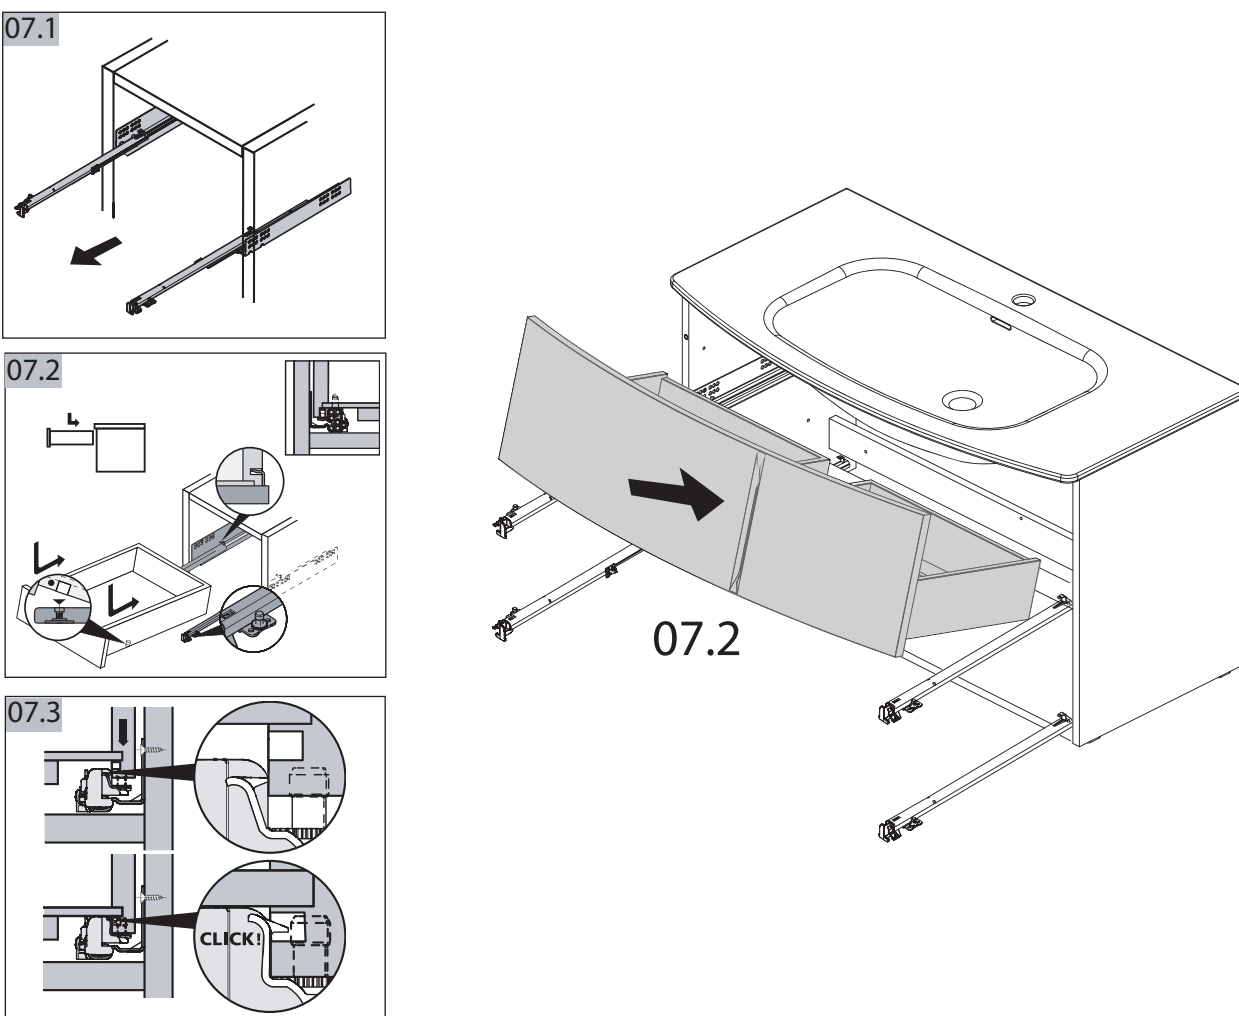


  08.

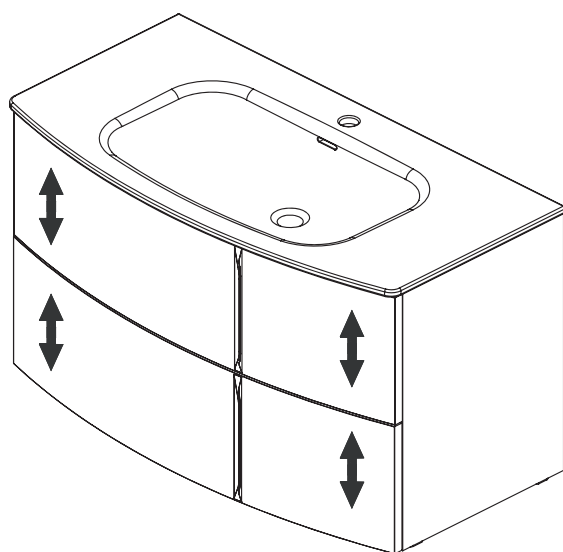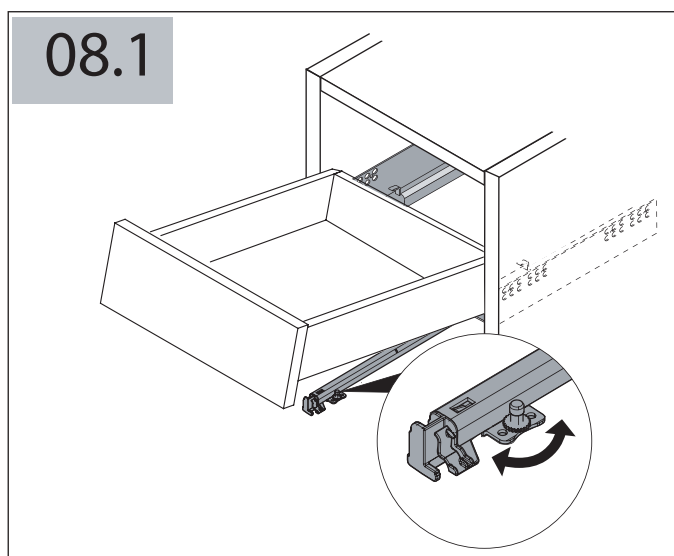


         09.

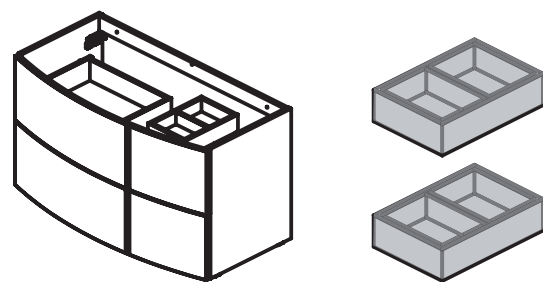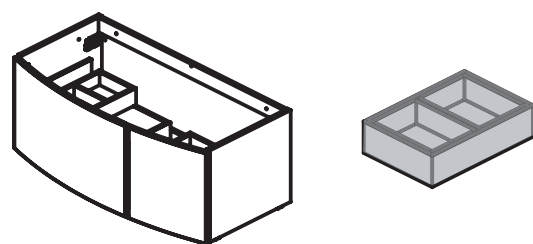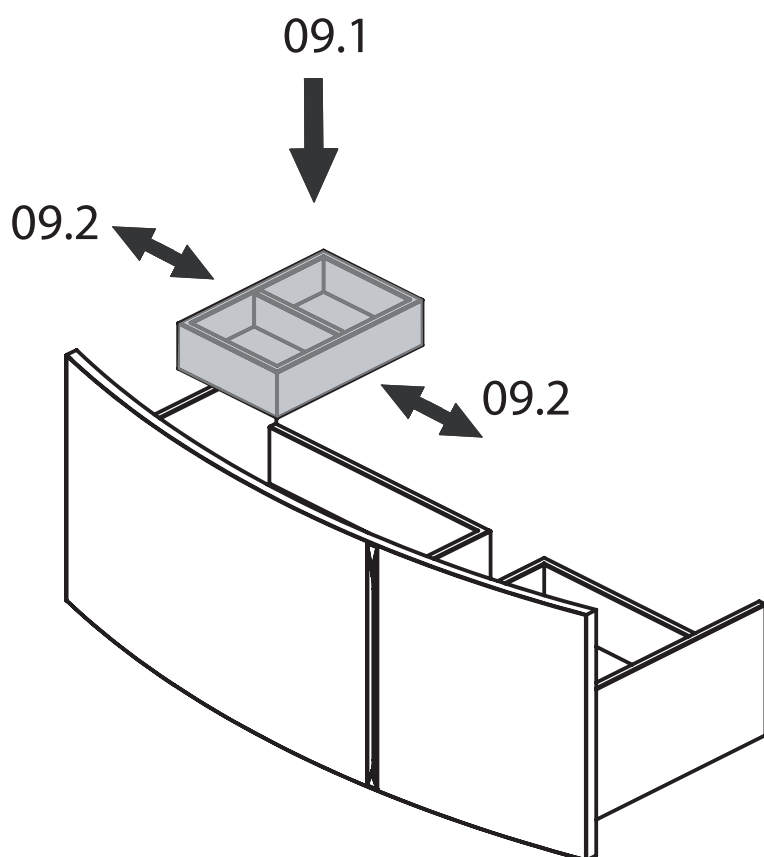


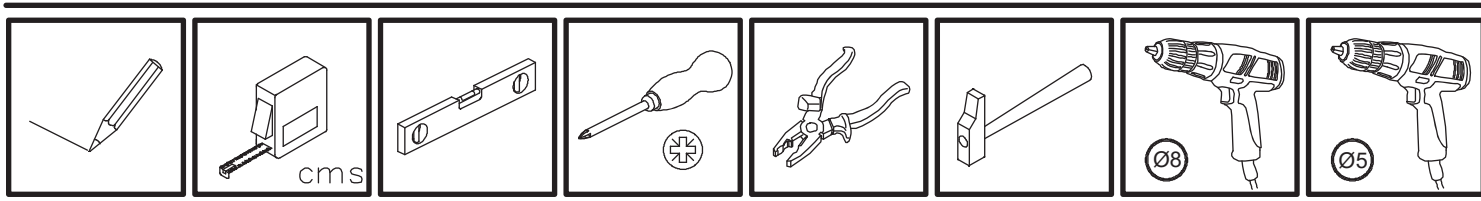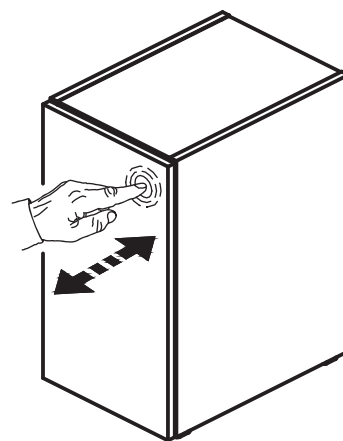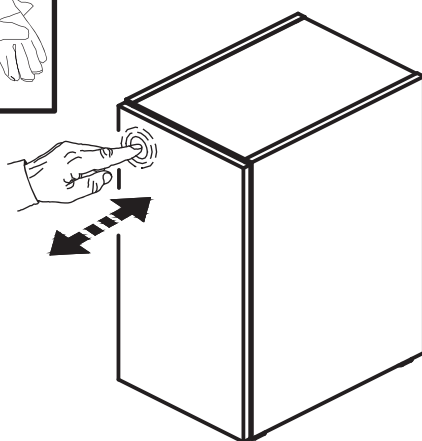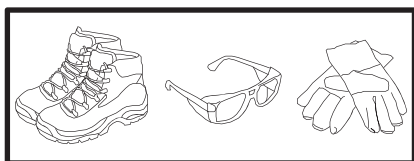


BO-719 / A x4

 


BO-719 / B x4

 


BO-719 / C x2

 

128059 x2







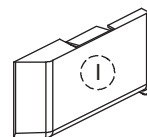 


138163 x1

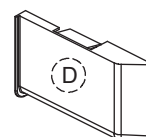 


138161 x1

       
01.

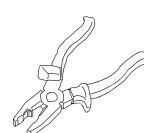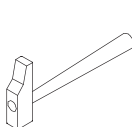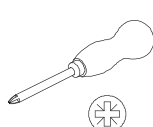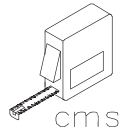


BO-719 x2

 


BO-719 / B x4

 



BO-719 / A x4

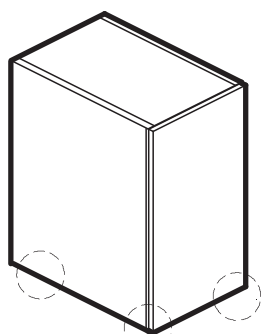 


01-1

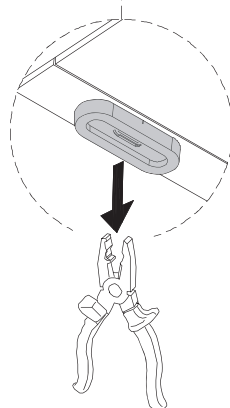 


01-2

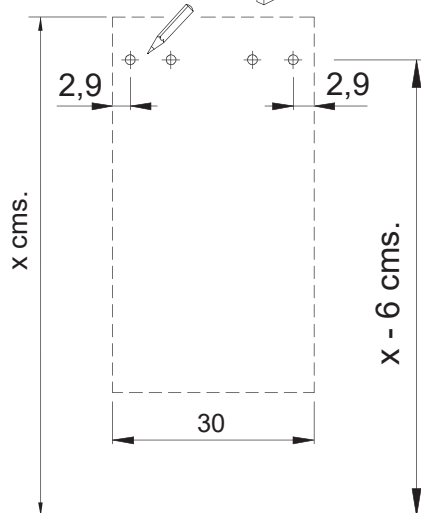  


01-3

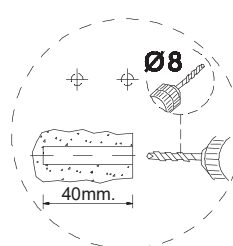 


01-4

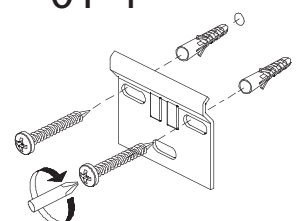 


 
02.

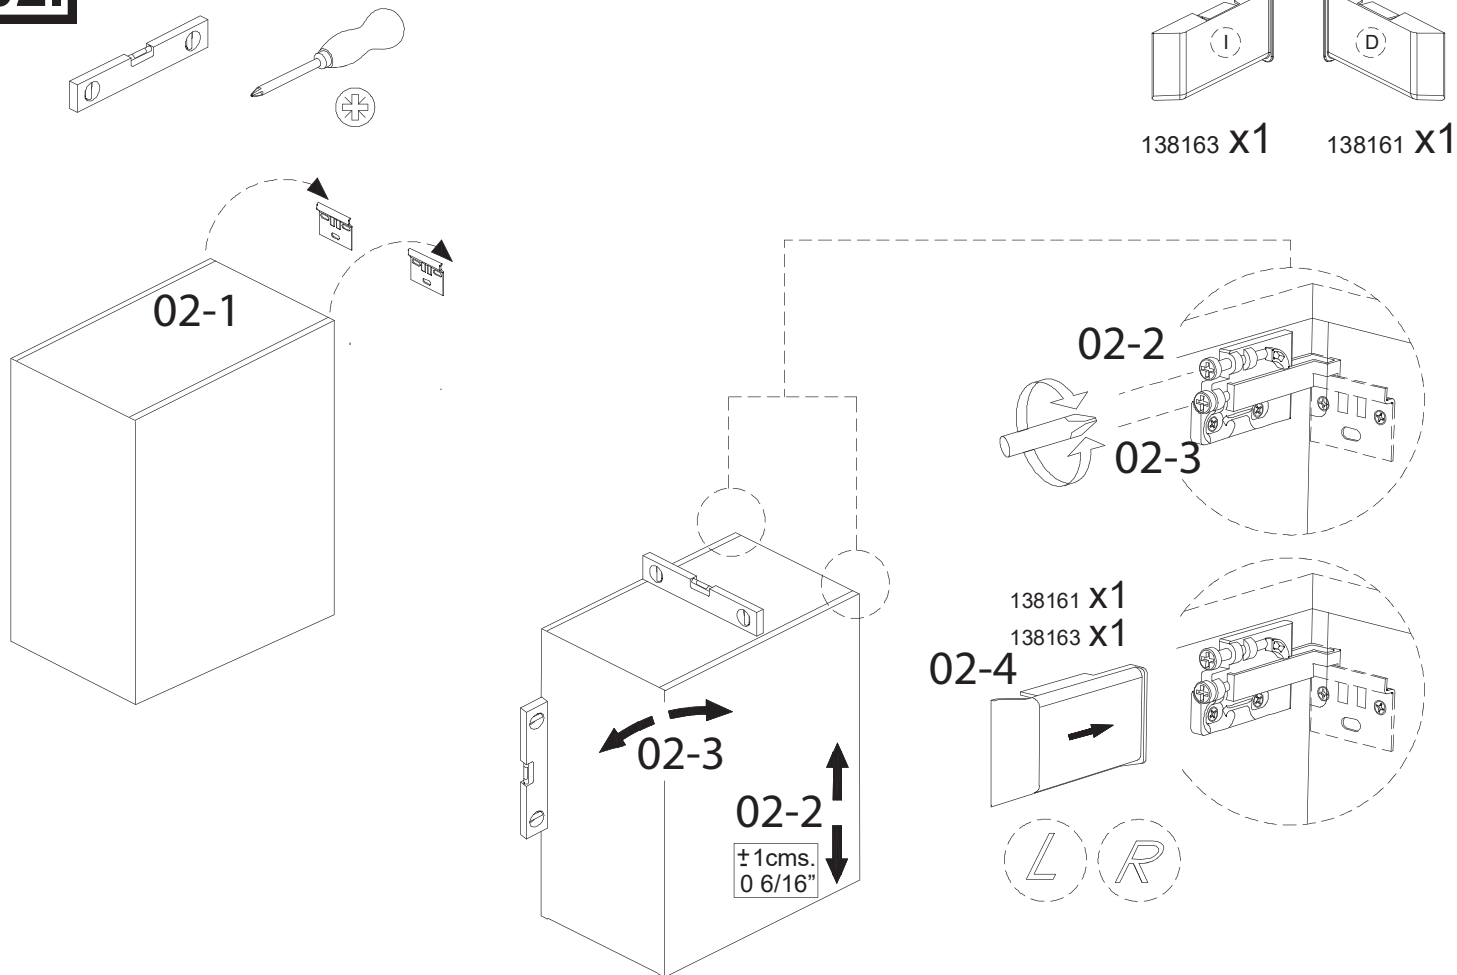


 
03.

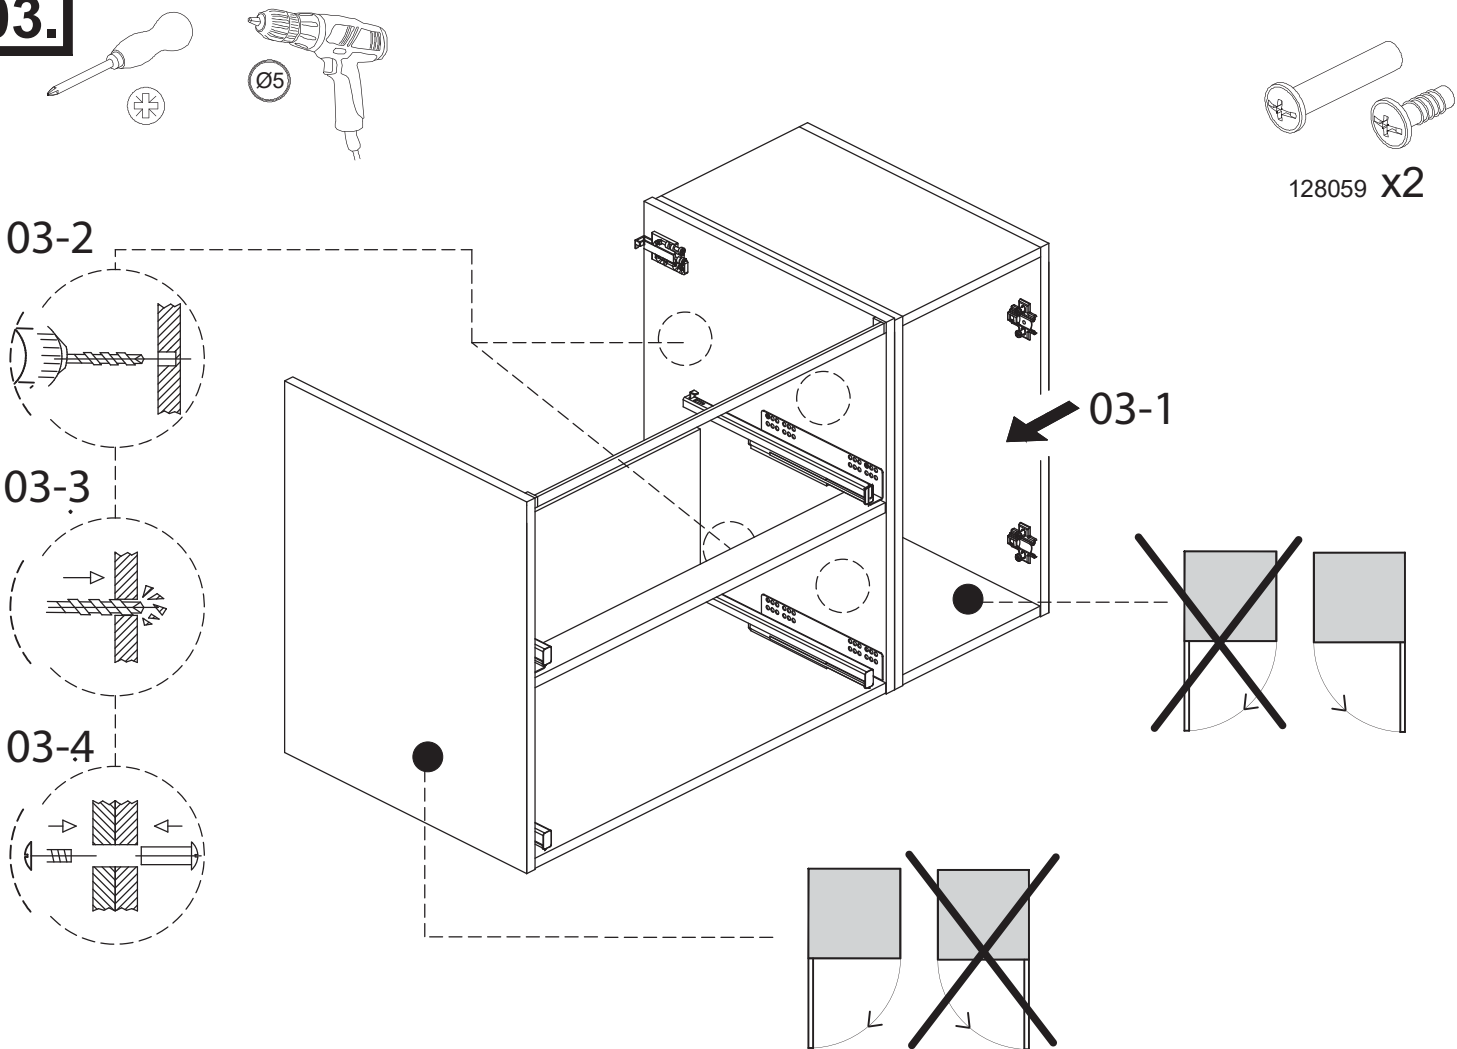

 
 
04.

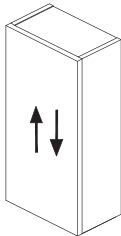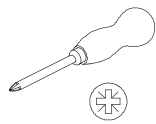



04-1

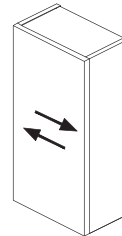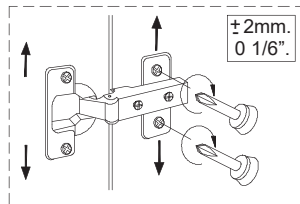  



04-2

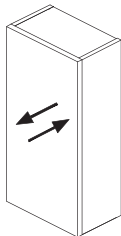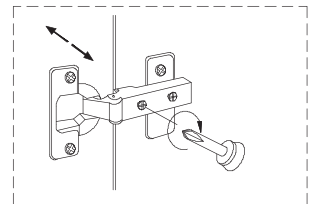  

04-3

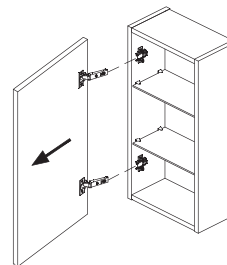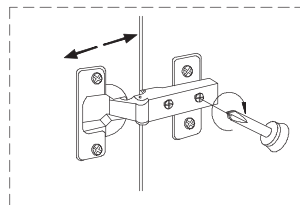  

04-4

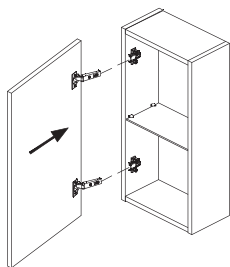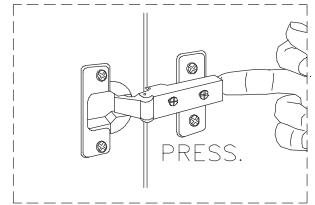  

04-5

